

# User Manual of Sunglasses Camera JVE-3107

## ● Product Accessories

- Sunglasses camera
- USB cable
- User manual CD
- A clip

## ● Picture & Buttons



1. Play key
2. Record/save key
3. LED
4. USB port
5. Micro SD card slot
6. Camera
7. Reset

## ● Technical Data

- 1) Product Size: 150\*50\*38 mm (folded)
- 2) USB: 2.0
- 3) Power Duration: 2-3 hours
- 4) Recharging time: 2-3 hours
- 5) Memory: Built-in 2GB/4GB internal memory, Support Micro SD card Max 4GB
- 6) Resolution of Video: AVI ,640\*480
- 7) Resolution of Photo: JPEG,1280\*1024
- 8) Quality Polaroid Lens from brand makers
- 9) Power consumption: 3.7V /320mAh
- 10) Player: Quicktime, Real player
- 11) Operation system: Win98, WinMe, WinXP, Win2000, Windows Vista
- 12) Highly recommended for journalists, traffic police, travelers, business, students

## ● **Operation**

### ◆ **Switch on**

Press the play key for 4-5 seconds till the red LED turns on.

### ◆ **Recording video and audio**

#### 1. Start to record

Press record/ save key one time shortly, the green light flashes 3 times then keeps on, it is start recording.

#### 2. Stop and Save

Press record/ save key one time shortly, the green will turn off after flashing 3 times, the red light will be on. The video files will be saved automatically and the camera back into standby mode.

### ◆ **Taking Photo**

Under standby mode, press the play key one time, the green light turns on, then it turns off and the red light turns on, indicating one photo is taken and saved, the camera back into standby mode.

### ◆ **Switch Off**

Press the play key for about 4-5 seconds will switch off the device manually, or insert the pin into the RESET hole, the device will power off also.

### ◆ **Storage**

If micro SD card inserted, the photo and video data will be saved into micro SD card first, when it's full, data will be saved into the built-in flash memory.

When space is full, LED light will stop blinking and start data saving; if built-in memory is full, device will shut off after data saving.

### ◆ **Reset**

Insert the pin into the RESET hole to restart the device once it doesnot work normally under incorrect operations.

### ◆ **Charging**

- 1) Charge the battery under power-off mode for fast recharge and best protection.
- 2) If failed to start the device, in most cases the battery is power off and needs to be recharged. For initial 5 charges, you are kindly requested to charge the li-polymer battery for at least 12 hours to ensure its best performance in future. Please do not charge it over 24 hours.
- 3) Usually a full charge requests 3-4 hours.
- 4) The red LED light turns on while recharging and turns off when battery is full charged.
- 5) If you haven't use the device for a long time, we suggest you to recharge the battery first before use it.

### ◆ **Playback video**

Connect the camera to your computer via USB cable to play back video.

### ◆ **Setting time**

- 1) Connect the camera to computer via USB cable
- 2) Insert the manual CD and find a file named GetSysTime
- 3) Click GetSysTime.exe to update the date and time same, after this, the time of the camera will synchronize with the time of computer when you restart it again.

### ● **Attention**

- 1) The system will save the video file firstly then turn off if low of power when taking video.
- 2) When taking video continually, the system will automatically generate a new video file after each operation.
- 3) The time of PC recognizing the device is different according to its different system and configuration, so please not operate during recognizing. If the device can't be recognized, please check your computer's operation system, device drivers, USB port and the USB cable is normal, and then connect the hardware again.