

User Manual of Sunglasses Camera

● Product Accessories

- Sunglasses camera
- USB cable
- Charger
- User manual CD
- A clip
- Glasses bag and cloth

● Picture & Buttons



1. Play key
2. Record/save key
3. LED
4. USB port
5. Micro SD card slot
6. Camera
7. Reset

● Technical Data

- 1) Main functions: recording video and audio at the same time, taking photo, USB drive, sunglasses, web camera
- 2) Quality Polaroid Lens from brand makers
- 3) Video format: AVI, 640*480
- 4) Photo format: JPEG, 1280*960
- 5) External memory: SD card 1GB-8GB
- 6) USB: 2.0 (Hs)
- 7) Charging time: 2.5-3 hours
- 8) Battery use time: Polymer Li battery. can use 2-3 hours continually
- 9) Operation systems: No need for driver installation if the operating system is Windows ME/ 2000/ XP/ Vista or above (windows98 is excepted)
- 10) Highly recommended for journalists, traffic police, travelers, business, students

● **Operation**

Before switch on, insert the Micro SD card.

◆ **Switch on**

Press the play key for 4-5 seconds till the red LED turns on and come to standby mode.

◆ **Recording video and audio**

1) Start to record

Press record/ save key one time shortly, the red light turns off and the green light flashes continually, it is start recording.

2) Stop and Save

Press record/ save key one time shortly, the green will turn off, the red light will be on. The video files will be saved automatically and the camera back into standby mode.

◆ **Taking Photo**

Under standby mode, press the power on/off key one time, the green light blinks one time, indicating one photo is taken and saved, the camera back into standby mode.

◆ **Switch Off**

Press the play key for about 4-5 seconds will switch off the device manually, or insert the pin into the RESET hole, the device will power off also.

◆ **Web camera**

The camera can be used as a web camera, before using must install the STK02N 2.3.exe of the user manual CD. Keep power on and connect with PC, it will come to PC Webcam Mode.

◆ **Reset**

Insert the pin into the RESET hole to restart the device once it does not work normally under incorrect operations.

◆ **Charging**

- 1) Charge the battery under power-off mode or standby mode connecting computer by USB cable, when it is being charged, the red light blinks, when fully charged,

the red light keeps on. If it's low- electricity, the red light will flash slowly.

- 2) Charge it using charger. When the green light of the chargers keeps on indicating the device is being charged. When fully charged, the green light will turn off.
- 3) If failed to start the device, in most cases the battery is power off and needs to be recharged. For initial 5 charges, you are kindly requested to charge the li-polymer battery fully.
- 4) Usually a full charge requests 3-4 hours.
- 5) The red LED light turns on while recharging and turns off when battery is full charged.
- 6) If you haven't use the device for a long time, we suggest you to recharge the battery first before use it.

◆ **Playback video**

Connect the camera to your computer via USB cable to play back video.

◆ **Setting time**

- 1) Connect the camera to computer via USB cable
- 2) Insert the manual CD then click the software of setting time tool named " setting time tool V2.0" in the CD, then the recording time of sunglasses camera will be synchronized with the computer
- 3) If you want to change the recording time of sunglasses camera, you only need to change the time of your computer.

● **Attention**

- 1) The system will save the video file firstly then turn off if low of power when taking video.
- 2) When taking video continually, the system will automatically generate a new video file after each operation.
- 3) The time of PC recognizing the device is different according to its different system and configuration, so please not operate during recognizing. If the device can't be recognized, please check your computer's operation system, device drivers, USB

port and the USB cable is normal, and then connect the hardware again.