

User Manual of Socket Camera JVE-3108

● Product Accessories

- Socket camera
- USB cable
- User manual CD

● Picture & Buttons



1. Camera
2. Mic
3. Record button
4. USB port
5. Powr on/off (left side: power off; right side: power on)
6. Micro SD card slot

● Technical Data

- 1) Main function: recording video and audio at the same time
- 2) Video format: AVI, 640*480 resolution
- 3) SD card memory: 2GB-32GB
- 4) USB interface: 2.0 (Hs)
- 5) Charging time: 4-5 hours
- 6) Battery use time: built-in Li battery, 1-2 hours
- 7) Voice control function: 65DB
- 8) Operation systems: No need for driver installation if the operating system is Windows ME/ 2000/ XP/ VISTA or above (windows98 is excepted)

● Operation

Manual control mode

◆ Switch on

To start the device, please insert a Micro-SD card, press the record button while pressing the switch button to the right side. The blue light turns on in 2 seconds, it comes to standby mode.

◆ Recording video and audio

Press the record button at the standby mode, yellow light twinkle 3 times quickly. When the light turns off, it begins recording. Press the button again, the light turns blue, the device stop recording and saving the data. It comes to the standby mode again.

◆ Switch off

Under standby mode, press the switch button to the left side, the device stop working.

Ps: When the switch button is pressed to the left side while recording, the video will not be saved and the device stop working directly.

Voice control mode

◆ Switch on

Press the switch button to the right at the power-off status, blue light turns on, the light will turn off in 10 seconds; the device comes to the voice control mode.

◆ Recording video and audio

The device will record automatically when the sound is above 65 DB. It will record 5 minutes and then stop and save the data. When the surrounding sound is above 65 DB again, it repeats the above recording.

◆ Switch off

Under voice control mode, short press the record button will exit the mode, the blue light turns on. Press the record button, the blue light turns off, the device comes into record.

◆ Charging

Please connect the camera to computer via USB cable and charge it. The red light keeps on while being charged. When the red light turns off, it shows the camera is fully charged. If the device is of low electricity, yellow light flashes slowly.

◆ Playback video

Connect the camera to computer via USB cable and play back video on computer. Please make sure there is the playback software in the computer before connecting.

◆ Setting time

When using the device for the first time, you can reset the time through the following way:

- 1) Connect the camera with computer
- 2) Create a new "time.txt" file
- 3) Edit time as format: 2009.12.12 12.12.12
- 4) Copy the file to the root of the disk of the camera
- 5) Rename the file as ".Time", after that the time is set successfully
- 6) When starting the camera again next time, the time will be simultaneous as the time file.

● Attention

- 1) This product is only suitable in security protection and home doorbell accessories, etc. For other illegal purposes, it's on your own account.
- 2) When the device is lack of battery when taking video, the system will save the video data first, then shut down automatically.
- 3) When taking video continually, the system will automatically generate a new video file after each operation.
- 4) Without inserting the memory card, the blue light will flash quickly, two minutes later, the light turns off and the device automatically shuts down.
- 5) If the memory is full: the yellow and blue light turns on at the same time.
- 6) As the device has built-in high-capacity polymer lithium battery, so it has a memory effect. We advise in the first 5 times of usage, charge the battery fully after the battery is out of use, so that the battery can work with its max working hours perfectly.