

User Manual of Lighter Camera JVE-3301

● Product Accessories

- lighter camera
- USB cable
- User manual CD
- Charger
- A clip

● Picture & Buttons



1. camera 2. ON/OFF 3. indicate light 4. MIC 5. fire 6.Reset

● Technical Data

- 1) Main function: record video and audio synchronously, USB drive
- 2) Video format: AVI
- 3) Internal memory: up to 4GB(max)
- 4) USB interface: 2.0
- 5) Resolution: 640*480
- 6) Charging time:2-3 hoursFps: ≤20 fps/sec
- 7) Recording time: built in Li-battery, 1~2 hours.
- 8) Operation systems: No need for driver installation if the operating system is Windows ME/ 2000/ XP/ Vista or above (windows98 is excepted)

● Operation

◆ Switch on

Press ON/OFF button, yellow and blue light will be on at the same time, after two seconds only yellow light is on, it comes to standby mode.

◆ Record video

Press ON/OFF button again, yellow light twinkle 3 times quickly, then the light turns off, it begins recording. Press the button again, the light turns yellow, the device stop recording and store the data. It comes to standby mode again.

◆ Switch off

Under standby mode or video recording mode, press the ON/OFF button for some seconds, the yellow light twinkle 3 times then turns off.

Under any mode, insert the clip to the reset hole, the device will power off.

Attention: while recording mode, press the reset hole to power off, the video can not be saved.

◆ Reset

Under incorrect operation or a certain reason, the device may stop working, at this time, insert the clip into the reset hole to reset, then the device is at power off mode.

While resetting, just a little strength is enough.

◆ Charging

If the device is of low electricity, yellow light flashes two times, then the camera will shut down automatically and the video file will be saved automatically before shutting down.

Please connect the camera to computer via USB cable and charge it. The yellow light keeps flashing while being charged. When the yellow light stops flashing and keeps on, it shows that the camera is fully charged.

◆ Play back video

Connect the camera to computer via USB cable to playback the video.

◆ Set ting time

- 1) Insert the device and the CD into your computer
- 2) Click the software "setting time tool V2.0" to make the time synchronous with the time on your computer.

- 3) When restart the device next time, the time will be shown on the video successfully
- 4) Change the time of your computer if you need to change the time of video.

● **Attention**

- 1) When the device is lack of battery when taking video, the system will save the video data first, then shut down automatically.
- 2) Connecting computer: while connecting, donot do any operation, if the device cannot be recognized by computer, please check the computer system, driver, USB port, USB cable, then reconnect.
- 3) As the devise has built-in high-capacity polymer lithium battery, so it has a memory effect .We advise in the first 5 times of usage, charge the battery fully after the battery is out of use, so that the battery can work with its max working hours perfectly.
- 4) While resetting, just a little strength is enough.