

User Manual of Multi-functional Thumb Camera

JVE-3303A

● Product Accessories

- Thumb camera
- USB cable
- User manual CD

● Appearance and Buttons



1. Power on/off (upward: on; downward: off)
2. Voice Control Button (upward: on; downward: off)
3. SD card slot
4. Camera
5. Record button
6. Indicator Light
7. Mic
8. USB

● Technical Data

- 1) Main Functions: recording video and audio under manual control model or voice control model; web camera; USB drive;
- 2) Tiny dimension, various usage
- 3) Video Format: AVI, 640*480
- 4) Support Micro SD card/T-Flash card 512MB/1GB/2GB/4GB/8GB (optional)
- 5) USB port: 2.0 (Hs)
- 6) Charging time : 2-3 hours
- 7) Battery: built-in Lithium-ion battery, can be used for 1-2 hours
- 8) No need for driver installation if the operating system is Windows ME/ 2000/ XP/ VISTA or above (windows98 is excepted)

● Operation

Manual control mode

◆ Switch on

Insert Micro SD card by pushing it firmly into the slot until it clicks into place. If without Micro SD card, when the camera is on, the green and red lights will be twinkling, then it can not be operated, one minute later, it will be power off.

Push the power button to ON, the red light is on, several seconds later, the blue light keeps on, indicating the machine enters into standby mode.

◆ Recording Video and Audio

- 1) Under standby mode, press record/save button, the green light twinkles slowly that indicates it starts recording.
- 2) Press record/save button again, the blue light keeps on, it stops recording and saves the data.

Remark: Every 30 minutes will automatically save the file, then continue recording .

◆ Switch off

Under any mode, push the ON/OFF button to OFF side, the camera will be power off. While recording, if push the ON/OFF button to OFF side directly, the recording data will not be stored.

Under standby mode: without any operation for five minutes, then the camera will power off automatically, in order to save the electricity.

Voice control mode

◆ Switch on

Push the voice control button upward, and push the power on/off button upward, the blue light is on, it comes to standby mode.

◆ Recording video and audio

The device will record automatically when there are some sound in the surrounding area, at the same time, the green light twinkles slowly that indicates it starts recording. If there is no sound for 2 seconds, the device will back to standby mode.

◆ Switch off

Under voice control mode, push the power on/off button downward.

Attention: while recording, the file cannot be saved if power off directly.

◆ **Charging**

Under power off mode, connect the camera to the computer by USB cable, the red light keeps twinkling, indicating it is being charged. The red light stops twinkles and keeps on, indicating it is full of electricity.

◆ **Playback**

After recoding, connect the camera to the computer by USB cable, click the removable disc, and select the record files and double click, then the files can be played in the computer. Before connecting please make sure the computer has been installed the related playing software.

Use as a Web camera

Install a driver in the user manual CD, the name of driver is “ USB Camera Driver V1.102.exe”, Follow the installation steps to complete installation .

When the machine is off or under standby mode, press record button, at the same time, connect the camera to the computer, when the USB Symbols appears, stop pressing the record button, then it can be used as a web camera.

◆ **Attention:**

- 1) To get the video with a correct direction, natural colors, steady picture, the distance between the camera and the things should be above 50cm under the enough lighting conditions. The system will automatically save the video file every 30 minutes. If you want to go on recording, please press the record/save button for some seconds.
- 2) While recording mode, if the memory is full, the green light keeps on.
- 3) In the following circumstances, the camera will save the data and power off.
 - Lacking of electricity: the red light will be twinkling for several seconds then the camera will save the data automatically and power off.
 - The memory is full: the blue light and red light are twinkling for several seconds, then the camera will save the data and power off.