

User Manual of Motion Detection Camera JVE-3303C

● Product Accessories

- Motion Detection Camera
- USB cable
- User manual CD
- B universal rotation bracket
- Cloth bag
- Sticker & nail

● Appearance and Buttons



- | | | | |
|--------------------|------------------|-----------------|-------------|
| 1. Power on/off | 2. Camera | 3. Video/Save | 4. MIC |
| 5. Indicator Light | 6. Switch Button | 7. SD card Slot | 8. USB Port |

● Technical Data

This camera is tiny size, elegant design, and easy taking. Along with multifunctional metal hang tag and universal rotation bracket, it can be put on chest, install on desk, wall, car centre console, etc to record video and audio.

- 1) Main Functions: recording video and audio at the same time by Manual and Motion Detection; USB drive; Web Cam
- 2) Video Format: AVI, 640*480
- 3) Memory: Micro SD card 1GB-8GB
- 4) USB port: 2.0 (Hs)
- 5) Charging time : 2-3 hours
- 6) Battery: built-in Lithium-ion battery, can be used for about 2 hours
- 7) Recommended players: Kmpayer、Mplayer and other media players that support various formats
- 8) No need for driver installation if the operating system is Windows ME/ 2000/ XP/ VISTA or above (Windows98 is excepted)

● **Operation**

◆ **Switch on**

- 1) Before switch on, please insert Micro SD card by pushing it firmly into the slot until it clicks into place. Without Micro SD card, when the camera is on, the green light will blink quickly, 1min later, it will be power off automatically.
- 2) Under power off mode, press power off/on button, the blue light keeps on, indicating it enters standby mode.

Attention:

- If it is lack of power, blue light will blink slowly, 2 minutes later, it will be power off automatically.
- It will power off automatically under standby mode without any operation within 2 minutes.

◆ **Recording Video and Audio by Manual**

- 1) Under standby mode, push Switch Button to “M1”, press the video/save button once, green light blinks slowly, indicating that it is recording audio & video.
- 2) Press video/save button once again, blue light keeps on, it stops recording and saves the video.

Attention:

The camera will save video every 30 minutes automatically, then continues recording.

◆ **Motion Detection Recording**

- 1) Under standby mode, push Switch Button to “M2”, it will switch to motion detection recording mode. When the camera is moving or the video targets are moving, the green light keeps on, it starts to record automatically.
- 2) When the camera and video targets keep still for 20 seconds, the camera will stop recording and save video automatically.
- 3) Under motion detection recording mode, when the video targets move again, it will record automatically again.

◆ **Mode Switch**

- 1) Under manual recording mode, push the Switch Button to “M2”, video will be save automatically, and camera enters into motion detection mode.
- 2) Under motion detection mode, push the Switch Button to “M1”, video will be save automatically, and camera enters into manual recording mode.

◆ **Switch off**

Under any mode, push power on/off button, the lights are off, indicates it is power off.

◆ **Charging**

- 1) Under power off mode, connect the camera to the computer by a charger along with the product, the red light keeps on, indicating it is being charged. The red light turns off indicating it is fully charged.
- 2) When it is lack of electricity, the device will enter the protective mode directly, it can not be switched on. Now please charge it.

◆ **Playback Video**

After recoding, power on the camera, make sure the Switch Button is on “M1”, connect the camera to the computer by USB cable. Before connecting please make sure the computer has been installed the related playing software.

◆ **Setting Time**

Please set the time correctly as follows:

- 1) Insert the user manual CD into the computer
- 2) Open the file: update time tool V2.0
- 3) Click the file, then the time of the pen camera will be the same as your computer
- 4) If you want to change the video time, just adjust the time of computer

◆ **Used as a web camera**

- 1) Install a driver in the user manual CD, the name of driver is “STK02N 2.4.1.exe”, Follow the installation steps to complete installation .
- 2) Power on the camera , push Switch Button to ‘M2”, connect to the computer, a standard video equipment will appear in the computer, now the device can be used as a webcam.
- 3) As this driver cannot be uninstalled automatically, so when installing this driver even number, the system will uninstall the drive, and delete some files, this leads to webcam function fails, at this time just install the driver once again, it will be normal again.

◆ **Attention**

- 1) When recording, if it is lack of power, the device will save the data before power off.
- 2) Please use it under bright environment, and keep the device vertical and stable, keep it far away from the view more than 50meters, so that it can get a best recording.
- 3) It needs some time to save the data, so do not operate it repeatedly when saving data. Otherwise the data cannot be saved smoothly, even make the data

incomplete.

- 4) The device built-in high capacity polymer lithium-ion battery, no remember function, can be rechargeable. In the first 5 usages, please charge it fully when it is power off. Then can activate the max capacity and get the standard time.
- 5) Once memory of SD card is full, the camera cannot record, green light turns on, 30 seconds later, it will power off automatically.