

User Manual of Flashlight Camera JVE-3308A

● Product Accessories

- Flashlight Camera
- User Manual CD
- USB Cable
- Charger

● Picture & Buttons



1. LED Power On/Off
2. Power On/Off/Photo
3. Record/Save
4. Reset
5. SD Card Slot
6. USB Port
7. Camera
8. LED Light

Technical Data

- 1) Functions: recording video & audio at the same time, taking photo, USB drive, flashlight, night vision
- 2) Video: AVI, 640*480 resolution
- 3) Photo: JPEG, 1600*1200 resolution
- 4) Support Micro SD card/TF card:1GB-32GB(optional)
- 5) USB: 2.0(Hs)
- 6) Charging time: 5-6 hours
- 7) Battery use time: built-in Li battery, recording video & audio for about 3 hours
- 8) Operation systems: No need for driver installation if the operating system is Windows ME/ 2000/ XP/ Vista or above (windows98 is excepted)

● Operation

◆ Inserting SD card

Rotary to open the rear cover of the flashlight, insert the Micro SD card/TF card into the SD card slot. When inserting, please let the side with metal face to the USB port

◆ Switch on

Under power off mode, push the power on/off button for long time, ①、② red lights and ③ green light are on at the same time. Several seconds later, ③ green light turns off, which indicates it comes to standby mode.

◆ Recording video and audio

- 1) Under standby mode, press record/save button one time, ①、② red lights turn off, ②, ③ green lights keep on, which indicates it is recording.
- 2) Press record/save button again, ②, ③ green lights turn off, ①、② red lights are on. Which indicating it stops recording and save the recording data then returns to standby mode.

Note: when it last recording, it will save one file every 36 minutes 27 seconds. If you want to continue recording, please operation it as the above.

◆ Taking photo

Under standby mode, press power on/off/photo button one time, ③ green light blinks once. which indicates one photo is taken and saved. If you want to take more photos, please do the same operation.

◆ Switch off

- 1) Under any mode, push the power on/off/photo button, all the lights are off, indicating it is power off.
- 2) Under any mode, press the reset button once softly with a clip, all the lights are off, indicating it is power off.

Attention :When it is recording, press power on/off/photo button for long time, the device will save the video file then power off. If press the reset button with a clip, then the video file won't be saved.

◆ **Lighting**

Under any mode, press LED switch button once, the LED is on, press LED switch button again, the LED is off.

◆ **Reset**

Under incorrect operation or a certain reason, the device may stop working, at this time, insert the clip into the reset hole to reset, and then the device is at power off mode.

Note: when resetting, please click that hole softly, in case of breaking the device.

◆ **Charging**

Being charged by the charger, the green light keeps on, indicating it is being charged.

The green light turns off when it is fully charged.

Note: when it is lack of electricity, the red light keeps blinking, please charge it on time, when it is fully charged, please take it away from the power on time too, in order to avoid breaking the battery.

◆ **Playback**

After recoding, connect the camera to the computer by USB cable under power off mode to playback the files. Before connecting, please make sure the computer has been installed the related player software.

◆ **Setting Time**

There is a function which show the video recorder time (year-month-day hour: minute: second) will be recorded in the recorded files, and will be shown when playback.

Please set the time correctly as follows:

- 1) Insert the user manual CD into the computer
- 2) Open the file: update time tool V2.0
- 3) Click the file, then the time of the flashlight camera will be the same as your computer
- 4) If you want to change the time, just adjust the time of computer.

◆ **Attention:**

- 1) When recording, if there is a lack of electricity, the device will save the data then power off.
- 2) When last recording, every operation later, the device will create a new video file automatically.
- 3) This device has to need Micro SD card to save the files, so please insert a Micro SD card to the SD slot.
- 4) The time of PC recognizing the device is different according to its different system and configuration, so please not operate during recognizing. If the device can't be recognized, please check your computer's operation system, device drivers, USB port and the USB cable is normal, and then connect the hardware again.
- 5) In the adequate light environment, keep the DV vertical and stable, you can get best video and images within a certain distance.
- 6) As the device has built-in high-capacity polymer lithium battery, so it has a memory effect. We advise in the first 5 times of usage, charge the battery fully after the battery is out of use, so that the battery can work with its max working hours perfectly.
- 7) When recording, the red light and the green light will be blinking all the time indicating its memory is full.
- 8) As the device has built-in high-capacity polymer lithium battery, so it has a memory effect. We advise in the first 5 times of usage, charge the battery fully after the battery is out of use, so that the battery can work with its max working hours perfectly.