

User Manual of Apple MP3 camera JVE-3309

● Product Accessories

- MP3 camera
- USB cable
- User manual CD
- Earphone
- Charger

● Picture & Buttons



1. Power on/off
2. Earphone
3. Record Button
4. Photo Button
5. Volume Decrease/PREV
6. Play Button
7. Volume Increase/FFWD
8. USB Port
9. Camera
10. SD Card Slot
11. Indicator Light

● Technical Data

- 1) Main function: MP3 player, taking photo, recording video & audio, USB drive
- 2) MP3 function: support MP3, wma, wav format files
- 3) Video format: AVI, 640*480 resolution
- 4) Picture format: JPEG, 1280*1024
- 5) SD Card: 1GB-8GB
- 6) USB interface: 2.0 (Hs)
- 7) Charging time: 3-4 hours
- 8) Battery use time: built-in Li battery, 1-2 hours
- 9) Recommend Player: Kmpayer, Mplayer, Windows Media Players that supporting multi formats.
- 10) Operation systems: No need for driver installation if the operating system is Windows ME/ 2000/ XP/ Vista or above (windows98 is excepted)

● Operation

To start the device, please insert a Micro-SD card, then power on the device

◆ Switch on

Press the power on/off button, and then press the play button for several seconds, the yellow light keeps on, indicating the camera comes to standby mode.

◆ MP3 player

1. Under standby mode, press play button and then start to playing the songs, Press Volume Increase/FFWD once shortly then comes to the next song. Press Volume Increase/FFWD for several seconds to increase the volume. Press Volume Decrease/PREV once shortly then comes to the previous song. Press Volume Decrease/PREV for several seconds to decrease the volume.
2. Under MP3 player mode, press play button once shortly, songs playing pause. Press play button once again, playing continues. Press play button for several seconds to power off..
3. Under MP3 playing mode, press record button once shortly to quit MP3 player mode, and the yellow light keeps on , indicating the camera comes to the standby mode.

Attention: under the pause mp3 player mode, can not quit the mp3 player mode direct.

◆ Recording video & audio

Under standby mode, press volume increase/video button once, blue light keeps on, it starts to record video.

Press the button again, yellow light keeps on, it will begin to save data and back to standby mode.

Attention: To get the video with a correct direction, natural colors, steady picture, the distance between the camera and the things should be above 50cm under the enough lighting conditions. When taking video continually, the system will automatically save data for every 30 minutes and generate a new video file after each operation.

◆ Taking photo

Under standby mode, press volume decrease/photo button once, yellow and blue light

blinks once, a photo is taken, yellow light keeps on and back to standby mode.

To get the photo with a correct direction, natural colors, steady picture, the distance between the camera and the things should be above 50cm under the enough lighting conditions.

◆ **Switch off**

Under standby mode/recording video mode, press the play button for several seconds, all lights turn off. After power off the camera, put the power on/off button to the off to saving mode.

Attention: under recording video mode, press the play button for several seconds, the system will automatically save data. .

◆ **Web Camera**

The camera can be use as a web camera, before using must install the Driver exe of the user manual CD. More detail please refer to the user manual CD. Keep power on and connect with PC, press the play button for several second and the blue light keeps on than waiting 10 second, it will come to PC Webcam Mode.

◆ **Charging**

Under power off or standby mode, connect the camera via USB with the charger in the package box or PC USB interface, the yellow light flashing regularly, indicating that comes to charging mode. The yellow light keeps on when it is fully charged.

Attention: As the device has built-in high-capacity polymer lithium battery, so it has a memory effect .We advise in the first 5 times of usage, charge the battery fully after the battery is out of use, so that the battery can work with its max working hours perfectly

◆ **Playback video**

Under standby mode, connect the camera to computer via USB cable and play back video on computer. Please make sure there is the playback software in the computer before connecting.

Connect the camera via USB with the charger in the package box, the green light of the charger will turn on. The green light turns off when it is fully charged.

◆ **Setting time**

1. Insert the user manual CD into the computer
2. Open the file: update time tool V2.0
3. Click the file, then the time of the MP3 camera will be synchronous as time of computer
4. If you want to change the time, just adjust the time of computer

● **Attention**

- 1) Without any operation within 3 minute, the product will turn off automatically.
- 2) While recording, If the device if of low electricity, the system will save the file before power off.
- 3) When taking video continually, the system will automatically save data for every 30 minutes and generate a new video file after each operation
- 4) As saving the data need some time, do not operate while lighter transform, such as: press power on/off button, connect with PC etc. This will lead the data can not save successful or lost.
- 5) If the memory is fully, the lighter will back to standby mode, press record button the blue light keeps on for 3 seconds and then back to standby mode ,can not take video continually. The blue light and yellow light will alternate flashing.
- 6) The songs in MP3 camera should be stored in the file named "MP3" of the root disk, otherwise the songs cannot be recognized.