

User Manual of Home Security Clock Camera

JVE-3311B

● Product Accessories

- Clock camera
- USB cable
- User manual CD

● Picture & Buttons



1. Power on/off/record/save
2. Function button (Taking photos, motion detection & view of current status)
3. USB port
4. Time adjustment
5. Micro SD card slot
6. Camera
7. Indicator Light

Technical Data

- Main function: recording video and audio at the same time, taking photos, Motion Detection, Clock, USB drive, Web Cam
- Video format: AVI, 640*480 resolution
- Photo format: JPEG, 1280*960
- External memory: SD/TF card 1GB-8GB
- USB interface: 2.0 (Hs)
- Charging time: 2-3 hours
- Battery use time: built-in Li battery, can work continually about 1-2 hours
- Recommended players: Quicktime player, KMPlayer, Mplayer and others
- Operation systems: No need for driver installation if the operating system is Windows ME/ 2000/ XP/ VISTA or above (Windows 98 is excepted)

● **Operation**

◆ **Insert card**

Before switching on the camera, please insert Micro SD card by pushing it towards the dial direction.

◆ **Switch on**

Under power off mode, press power on/off/ button for some seconds, then the red light and the green light turn on. After initialization, the red light is off, while the green light keeps on, which indicates device enters into standby mode.

◆ **Recording video and audio**

Under standby mode, press the power on/ off Button once, green light will flash several times then turn off, indicating it starts to recording video. Press function button once and current status will be showed, and then green light will flash several times and turn off. Press the power on/ off button once, green light will keep on, showing the video is saved and the device back to standby mode.

◆ **Taking photos**

Under standby mode, press the power on/off button once, green light twinkles one time, indicating that a photo is taken and saved automatically. Then the device comes back to standby mode.

◆ **Motion Detection recording**

1) Under standby mode, press function button for some seconds, the red light and the green light will flash for some seconds then turn off together, indicating it comes to motion detection recording mode. When the camera is moving or the video targets are moving, while the green light keeps on, it starts to record automatically.

2) When the camera and video targets keep still for 20 seconds, the camera will stop recording and save video automatically. Under motion detection recording mode, when the video targets move again, it will record automatically again.

3) Under motion detection recording mode, press the function button once, current status will be showed and red light and the green light will flash for some seconds then turn off together. Press the power on/ off button once, green light will keep on, showing the video is saved and the device turns to standby mode.

◆ **Switch off**

- 1) Under any mode, press power on/off button for some seconds, red light and the green light will flash for some seconds then turn off together, indicates it is power off.
- 2) Press power on/off button and function button at the same time, then all the lights are off, it also indicates it is power off.

◆ **Reset**

Under incorrect operation or a certain reason, the device may stop working, at this time, insert the clip into the reset hole to reset, and then the device is power off.

◆ **Charging**

Connect the device to computer via USB cable under power off mode, the green light of the camera keeps on and red light flashes while being charged. When it is fully charged it turns to the green light is on and the red light is off.

Attention: The device has a function of memory by using built-in high-capacity polymer lithium battery. In the first 5 times, please charge the battery fully after you have used out the battery. By doing so, you can access the maximum capacity of the battery, reaching the standard working hours.

◆ **Playback**

Connect the camera to computer via USB cable and play back video on computer. Please make sure there is playback software in the computer before connecting.

◆ **Setting time**

When there is video playback, device will show the recording time on bottom right corner of video. Please set time as follow:

1. Insert the user manual CD into the computer
2. Open the file: update time tool V2.0
3. Click the file, then the time of the MP3 camera will be synchronous as time of computer
4. If you want to change the time, just adjust the time of computer

◆ **Use as a Web Cam**

- Install a driver in the user manual CD, the name of driver is “STK02N 2.4.1.exe”, Follow the installation steps to complete installation .

- Power on the camera, push switch button to 'M2', connect device to the computer, a standard video equipment will appear in the screen, and then the device can be used as a webcam.
- As this driver cannot be uninstalled automatically, so when installing this driver even number, the system will uninstall the drive, and delete some files, which lead to webcam function fails. At this time just install the driver once again, it will be normal again.

- **Attention**

- 1) If device is lack of electricity while recording, the file will be saved before the device turns off.
- 2) When taking video continually, the system will automatically generate a new video file after each operation.
- 3) Under a bright environment, keep camera vertical, stable and keep certain distance from the scene you want to record in order to achieve a best effect .
- 4) Connect to computer: the time for computer with different system or configuration to identify the hardware is slightly different. During this period, please wait for a moment. If computer can't identify, please make sure your operating system, drivers and USB interface cable in good work order, then connect again.